

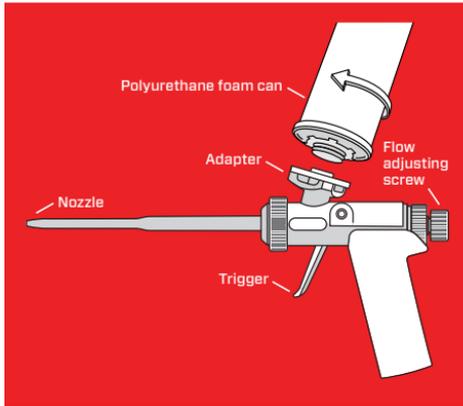
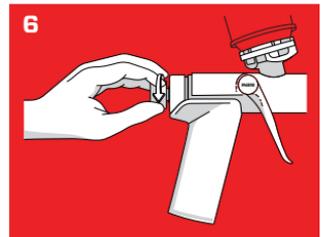
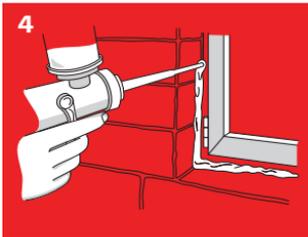


Operating instructions PAGERIS®

Foam gun for polyurethane foam

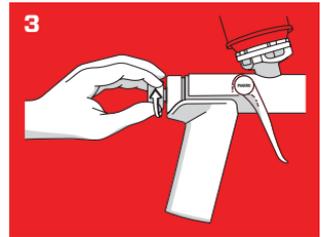

1. Shake polyurethane foam can in accordance with the relevant instructions.
2. Screw the polyurethane foam can into the adapter (do not tighten forcibly).
3. Release the safety device on the foam gun by turning the flow adjusting screw counter-clockwise (do not fully unscrew).
4. When using a new foam gun for the first time, press the trigger immediately and allow a little material to flow out in a controlled manner (this fills the foam duct and removes any moist air). The foam gun is now ready for use. The flow of material can be regulated by the trigger and restricted by the flow adjusting screw. If this screw is fully tightened, the trigger is inactivated (safety device).
5. To change the can, unscrew the empty one and replace it immediately by a new one to prevent curing of the foam in the adapter.
6. Always store the foam gun with a can fitted and the flow adjusting screw tightened fully clockwise.

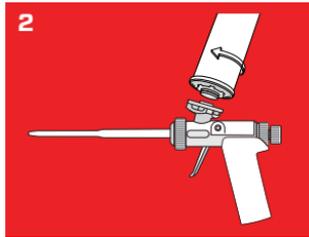

Important Notes

- After being used for the first time, the foam gun must **always** be fitted with a can to ensure that the system remains filled to the nozzle with foam and to prevent curing in the pistol. Empty cans should only be removed if a replacement can is available. After fitting a new can, press the trigger immediately to refill the foam gun completely with foam.
- **Never** use excessive force to remove the polyurethane foam can from the adapter.
- **Do not** clean the adapter with a hard object since this may scratch the non-stick coating.
- **Do not** remove cured foam residues on the nozzle tip with a hard object.
- Instructions on the polyurethane foam can are to be followed. Obey all instructions relating to safety and intended use. Wear safety goggles and work gloves.